

PC Moderator

PC Moderator PCM-1 Quick Reference Card 1.7

Quick Reference Guide
Graphic Screen Images

Computer Power On or Reset



Normal Power Up



Power cycled 3 times
without proper log in.

When the computer is powered with the PC Moderator installed, the screen will show a flashing blue or red FULL screen that gets smaller toward the top. Do not type on the keyboard during this time. Wait until the Login Prompt appears. If resuming from system standby with flashing blue screen, pressing <Scroll Lock> twice will skip to Login Prompt.

Login Prompt




Alternates between red and blue full screen patterns
Press <1> -<8>(users), <9>(Parent) or
<0>(Setup) key to select user to "log in".

Password Prompt



Enter password followed by <Enter> key. Also used to enter Bonus Time (0-9) or Allowance time (00-99).

Wrong Password

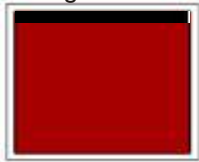

Full screen red when incorrect password (or not yet enabled that day by parent), then returns to Password Prompt. Multiple failed password entries will result in time out delays from 9-60 sec.

Time Not Available



Flashes 3 times when user has no time available. This may be due to out of range, no remaining time (faster) or user has been disabled (slower flashes).

Option Prompt



This prompt appears after pressing <Scroll-Lock> key twice in 2 seconds while logged in. Enter additional keys as required for Setup, Quick Changes, Tutorial and Remaining Time Graphic.